


APbattery 51.2V/6.5kWh

Outline Dimensions

Name	Data	Unit
Width	143	mm
Depth	475	mm
Height	765	mm
Weight	56±1	kg

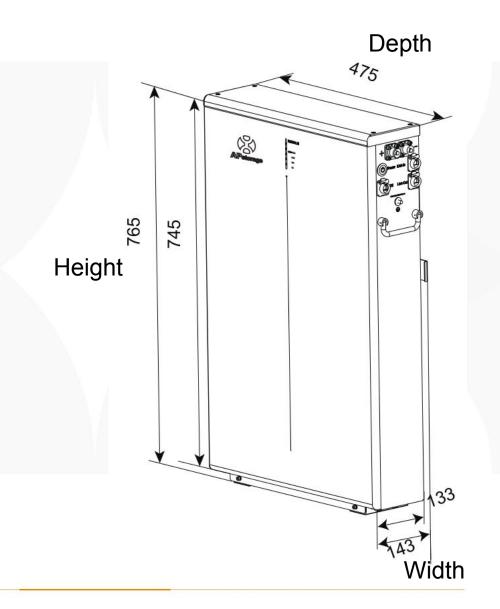

APsystems.cn

Use



NOTE: 1, RUN and SOC indicators turn on and indicate correct state. The battery is powered on successfully.

- 2, If ALM indicator lights up in red, a failure occurs. Troubleshoot the issue and power on the Battery again.
- 3. Whether parallel or single battery. The battery stops output 10 minutes after no communication, and automatically shuts down 25 minutes after no communication.


Important parameter

Name	Data	Name	Data
Total Energy Capacity	6.5kWh	Battery Capacity (Nominal)	128Ah
Rated/Usable Energy	6.0kWh	Rated/Usable Capacity	118Ah
Nominal Voltage	51.2V	Operating Voltage	48V~57.6V
Operating Temperature	-10~50 °C	DOD	94.5%
Max. Charging Current (Cell surface temperature)	-10°C≤T<0°C: 21.3A 0°C≤T<5°C: 32A 5°C≤T<15°C: 64A 15°C≤T<45°C: 104.2A 45°C≤T<50°C: 64A 50°C≤T<55°C: 32A	Max. Discharging current (Cell surface temperature)	-10°C≤T<0°C: 21.3A 0°C≤T<45°C: 104.2A 45°C≤T<50°C: 85.3A 50°C≤T<55°C: 32A
EOL(End of life)	10 years, or 60% SOH, or single cell voltage falls below 2.0V, from the manufacture date whichever comes first	Storage conditions	-30°C~-20°C & 45°C~60°C, within 7 days; -20°C ~ 45°C, within 6 months; Humidity: 5%-95%RH Within 6 month after each charge
Ingress Rating	IP55	Module parallel	1~8 Parallel
Cell safety certification	IEC62619/UL1973	PACK safety certification	IEC62619/CE/UL1973
UN transportation test standard	UN38.3+PI965(Sea)	Environmental protection certification	RoHS, REACH

Packing list

Standard				
Item		Quantity		
APbattery 51.2	2V/6.5kWh	1pcs		
Wall-mounted	d bracket	1pcs		
Fastening kit	M8 expansion bolt	9pcs		
	M8*H60 anchor	9pcs		
	M6 screw for grounding	1pcs		
	Bubble level	1pcs		
User Manual		1pcs		
Warranty Car	d	1pcs		
Accessory Lis	t	1pcs		
Terminator		1pcs		
Grounding wire		1pcs		
Positive power wire		1pcs (with a connector at one end, length: 1.5m)		
Negative power wire		1pcs (with a connector at one end, length: 1.5m)		
Communication wire		1pcs (length:1.5m)		


Installation Location

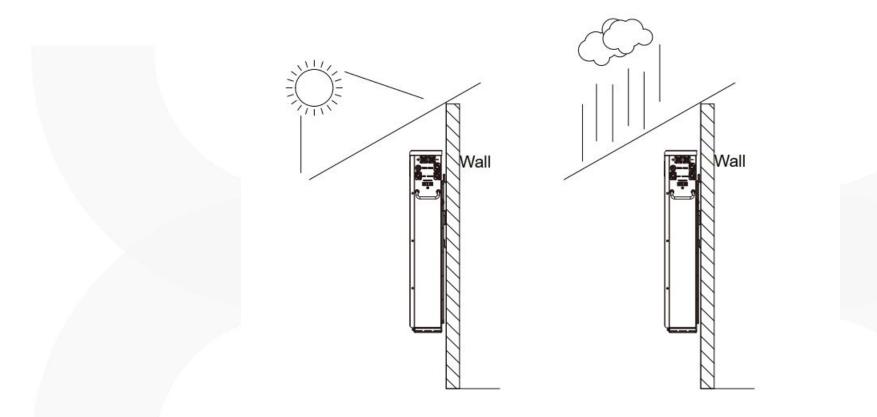


Note: 1. Keep the dirt or dust at a minimal level.


- 2. Do not install battery in a place where flood frequently occurs.
- 3. Do not install battery in highly humid area such as bathroom.
- 4. Ensure direct contact between battery shell and ambient air. Do not cover or shield battery to avoid poor cooling.

Wall Mounted Installation

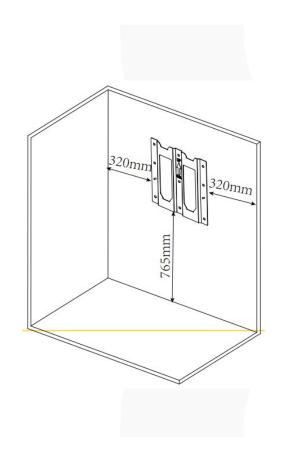




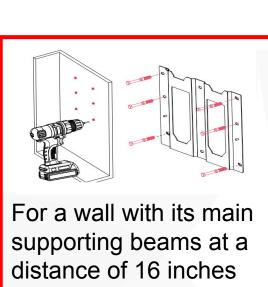

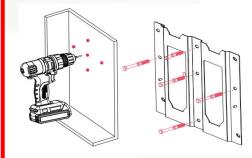


For a wall with its main supporting beam at a distance of 24 inches




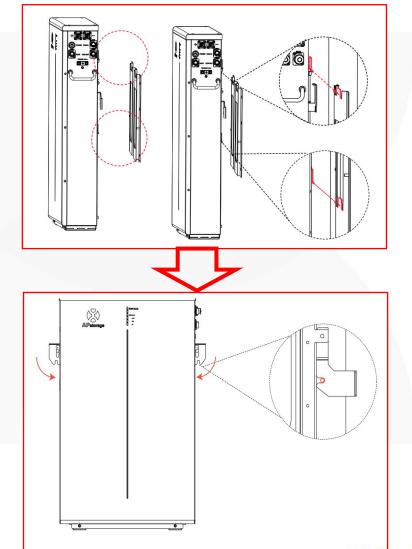

Floor Standing Installation

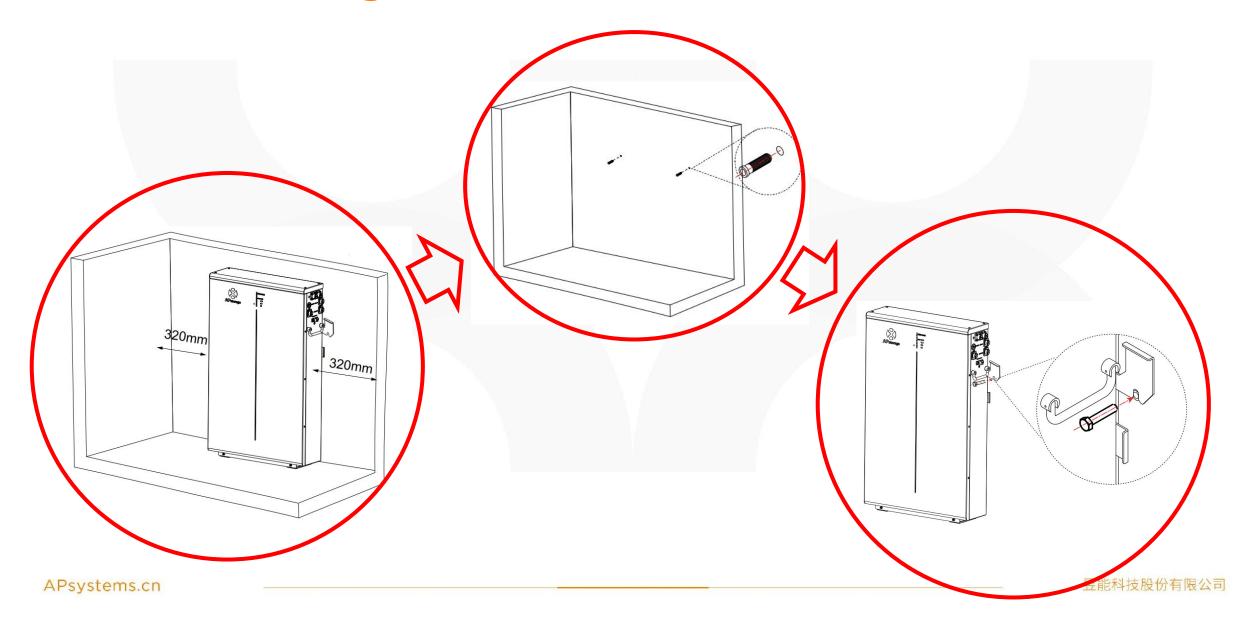

Connection port

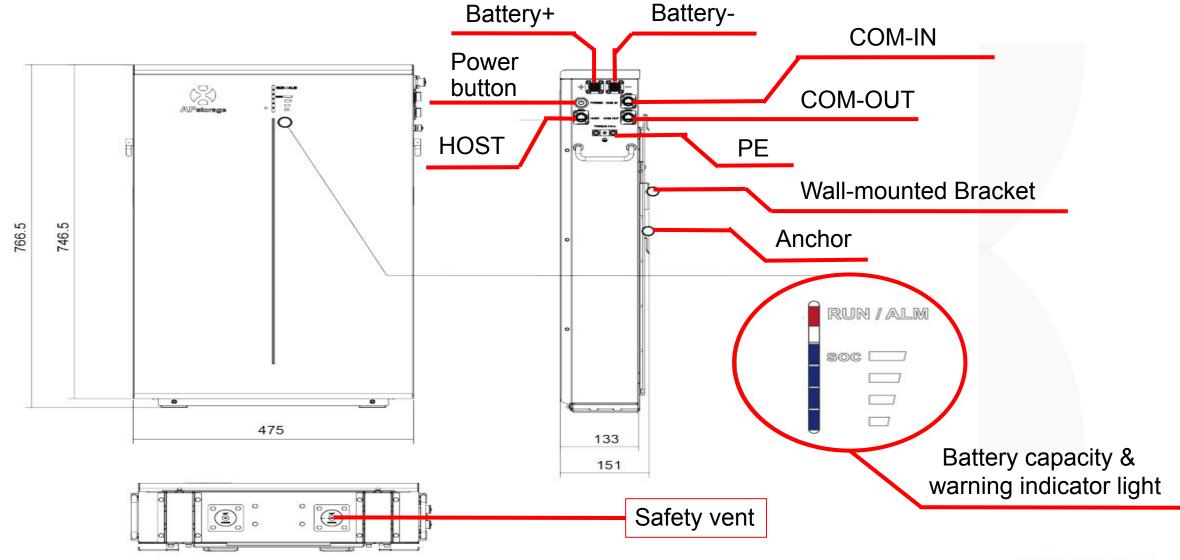


APsystems.cn

Single battery:

APbattery 51.2V/6.5kWh is only connected to a single battery, with a maximum charging and


discharging power of 5kw.

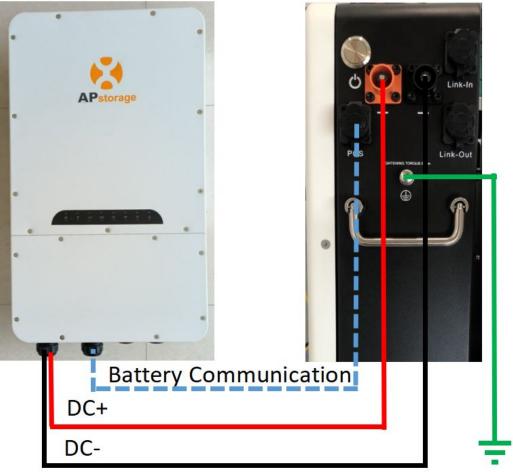

APsystems.cn

The battery units are connected in parallel:

In this way, you must insert the two terminals into the COM IN and COM OUT of the battery. Customers must purchase the DC bus box and the accessories in the bus box, as well as the DC line from the DC bus box to PCS, DC cable crimping terminal

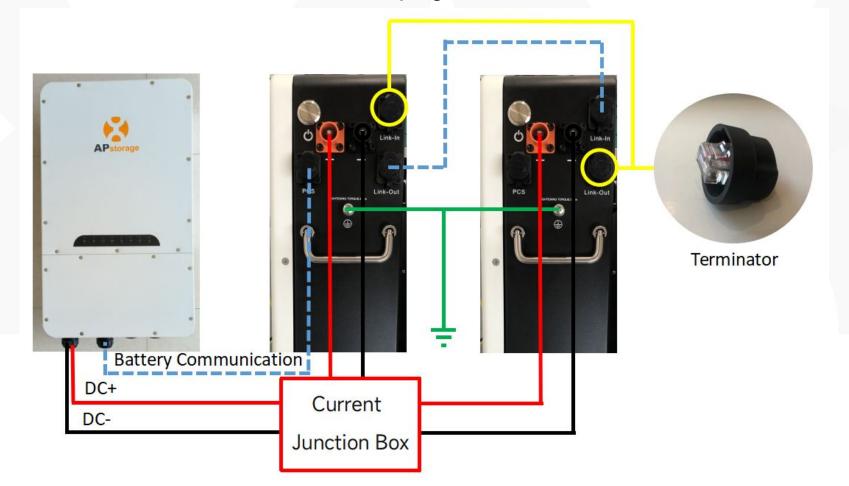

Wiring specification:

Type	Name	Icon	Specification
Standard	Positive power wire (DC+)		with a connector at oneend, length: 1.5m
Standard	Negative power wire (DC-)		with a connector at oneend, length: 1.5m
Optional	DC cable crimping terminal	/	TL25-8, Applicable to 4AWG/25mm2 cables
Standard	Grounding wire		1
Standard	Communication cable		length:1.5m
Standard	Terminator	/	1


The customer must purchase the list:

Туре	Name	Picture	Specification
Customers own	DC cable crimping terminal		TL25-8, Applicable to 4AWG/25mm2 cables
Customers own	PCS end cable jacket		M32×1.5
Customers own	Battery end cable jacket		M25×1.5
Customers own	busbar		M8 300A double row 5-stud bus
Customers own	bus-box		200×300×180(mm)


APstorage-Power ON




1. Turn on the Battery: Hold the POWER button for two seconds.

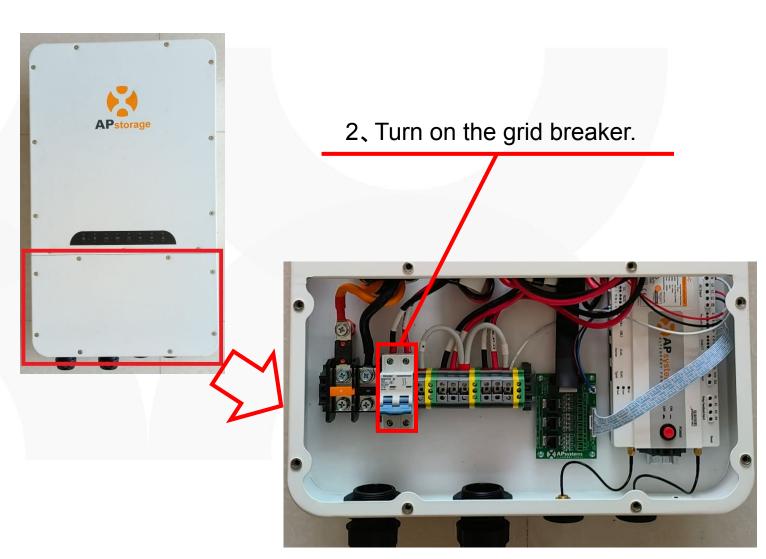

APstorage-Power ON

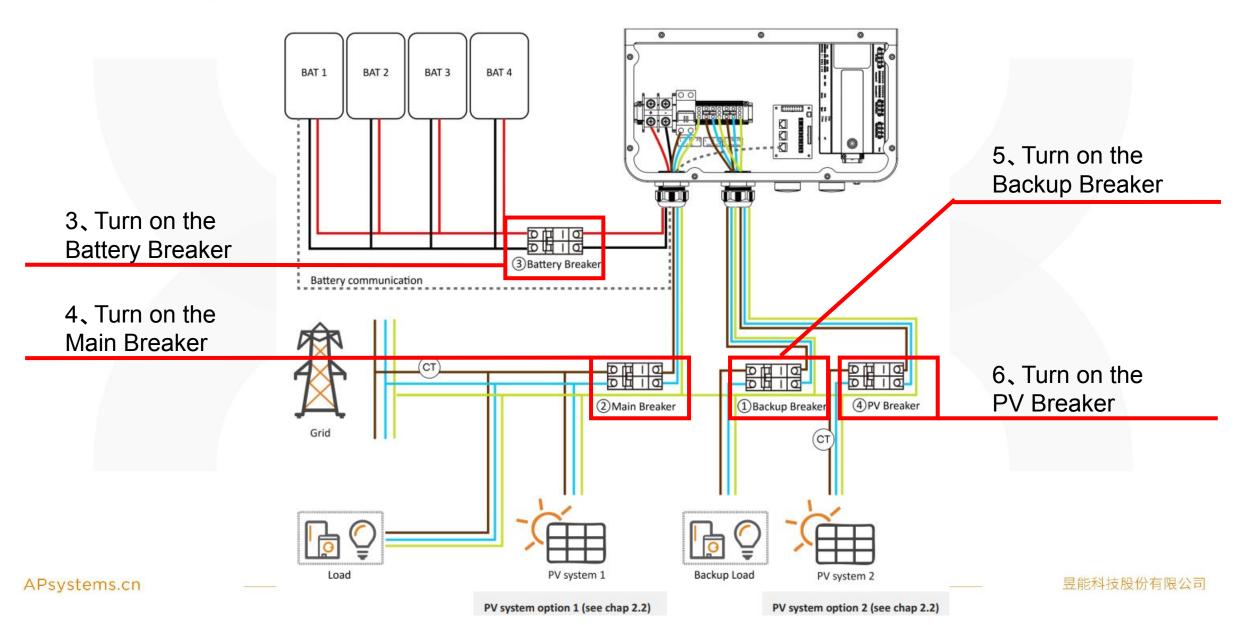


APstorage-Use

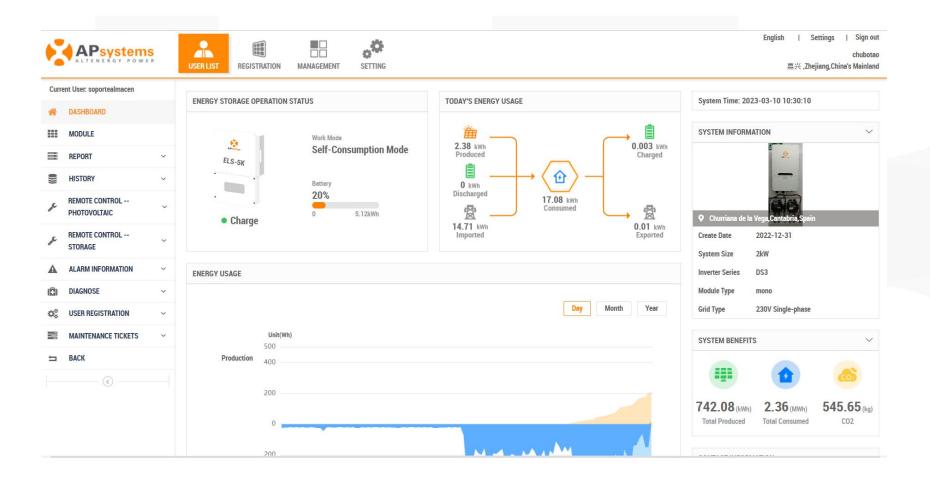




APstorage- Power Of

Turn off the Battery Breaker, Grid Breaker, Backup Breaker and Main breaker to power the system, then turn off the batteries.

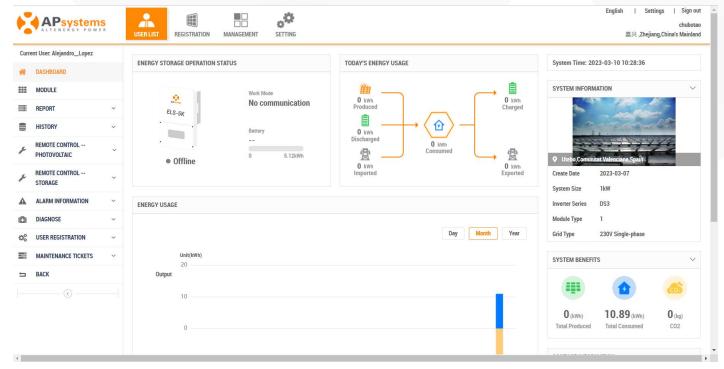

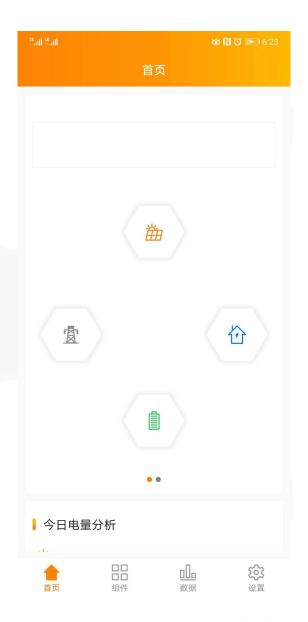



THANK YOU